




Operation Manual for Digital Lock System

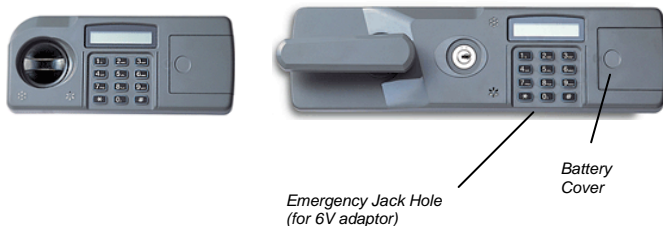

Thank you for purchasing a Brawn Safe

To open safe:

- Install 4-AA quality Alkaline batteries
- The factory code is set to **4560**
- Press

*	4	5	6	0	#
---	---	---	---	---	---
- Turn knob (Key) to the right and open the safe with “**Match**” on the LCD

To change the factory code (Manager code):

- With the door open, reach through the hole on the inside of the door and press the **M** button for changing inner number - LCD shows **New PW**
- Enter the new personal code from 4 – 16 digit (**ex: 5555**).
- Press the button (**#**) for the end – LCD shows **Success**
- Test the lock with door open by pressing ***5555#** and see **Match** on the LCD


Time penalty:

- If you make a mistake entering the code, **Error** will appear on the display. After 3 wrong attempts. **Please Wait** will appear on the display for 15 minutes, during that it cannot be used.

Changing batteries:

- The battery need to be replaced when the LCD shows **Low Battery**.

The 6V of direct current adapter can be used if there is no battery

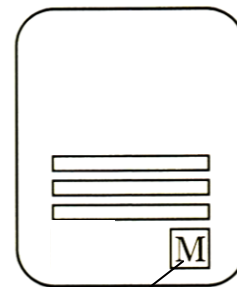

Changing Code button


To change code on the change mode (add users)

- Press “*” (Start Button)
- Press end button “#”
- Press your code
- Press “#”
- Change Mode & “0-Exit” will be shown on the LCD
- Press “1” (Change PW)
- Choose one personal code by pressing other subsidiary channel: “2,3,4,5” Put (Ex: 7777#) – LCD shows (New PW)
- Enter new personal code and then press “#” (Retype: New PW)
- Enter new pass word again and then press “#”
- The perfect confirmation of input will shown on LCD either (completion: **Success** or Failure: **Error**)
- Try from the beginning by pressing “*” button if failure

Function Mode:

Repeating numbers will be shown on the LCD as below when you press “#” on the 0-Exit of “Change Mode”

- **0-EXIT** (Change Mode)
The customer’s personal codes from channel 1-5 are available
- **1-Delete Password**
 - Channel 1 as the master code couldn’t be deleted but be changed
 - Channel 2-5 could be deleted
- Press “2” on change mode (Delete #: 2,3,...)
- Press the channel you want to delete (**1=Yes or 0=No**)
- To delete press “1” to cancel press “0”
- If will be shown on the LCD at change mode (2-Delete Password)
- **7-Display Mode** (The Function of Hiding Personal Code)
 - To hide press “7” again at the 0-Exit (Display Hide) Ex: (4560) will shown (****)
 - To cancel press “7” again at the 0-Exit (Display Normal) Ex: **** will be 4560
- **8-View Log** (The function for identifying the button user)

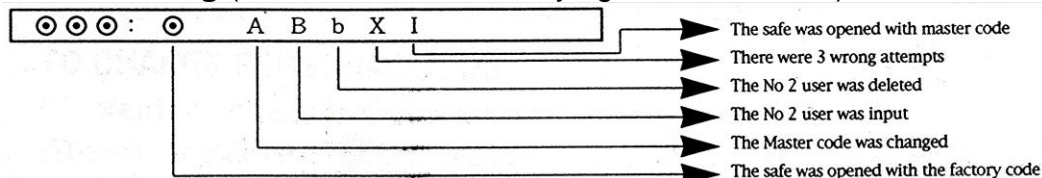

When you press “#” you are able to identify the status used it more than ten times. You will return to change mode when you press “0”

The method for identifying usage

Digit== The user who is matched with digit used safe

Capital Letter== The users from 1-5 (from A-E) was input

Small Letter== The users from 2-5 (from b-e) was deleted

0== The safe was opened with the factory code

X(English character)== There were 3 wrong attempts

- **9-Delete Log** (the function for deleting the button users)

Press 9 at the 0-Exit (1=Yes, 0=No) Success when you push “1”

In case the “Empty Log...” was shown, it means that all data were deleted