

OPERATION INSTRUCTION

CAUTION: Do not keep the keys in the safe.

1. OPENING THE SAFE FOR THE FIRST TIME

To open the safe for the first time, remove the small plastic cover (a) (see diagram 1) on the front panel, insert the key into the lock and turn it counter-clockwise, at the same time, turn the knob clockwise and open the door.


2. INSTALLING THE BATTERIES

The safe requires 4×size 'AA' (1.5V) batteries. Remove the battery cover (on the back of the safe door) and install the batteries into the compartment. Ensuring the batteries are fitted with the correct corresponding polarity. The display will scan the status of the electronic lock system automatically. If it is in order, the display (c) (see diagram 1) will show 'good'.

Use of alkaline batteries is recommend.

3. OPENING THE SAFE AFTER INSTALLING THE BATTERIES


To open the door of the safe, press the button 'START' (d) (see diagram 1), the display on the panel will show '-----', then input one of the two sets of **factory-preset codes: 0,0,0,0 (user code)** or **8,8,8,8 (master code)** immediately and confirm by pressing the button 'START'. You will hear a musical sound with the display showing 'OPEN' and open the safe using the knob within approximately 4 seconds.

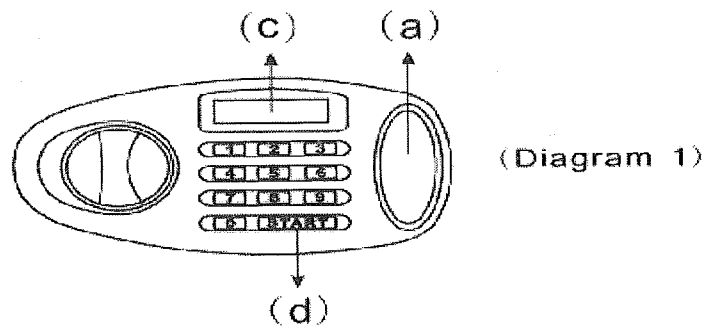

(Diagram 1)

4. PROGRAMMING THE CODE

NOTICE: The safe can be programmed with two sets of codes. For your safety, after opening the safe and installing the batteries, you should program two sets of your new codes to take the place of two sets of factory-preset codes.

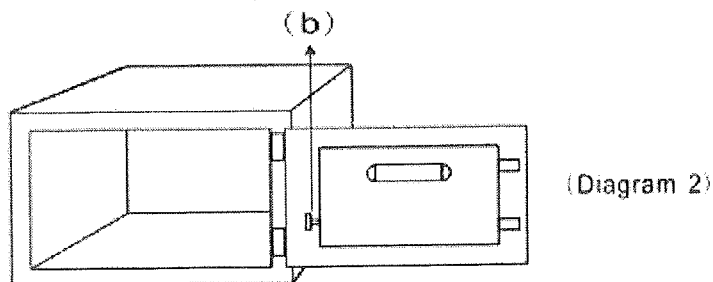

(Diagram 2)

Programming the user code

- A. With the door of the safe open, press the red button(b) (see diagram 2) (located on the inside of the door near the hinge) and the display will show 'SET Code'.
- B. Now press from any of the 3 to 8 numbers that you wish to use as a new user code, and confirm by pressing the button 'START'. After hearing a musical sound, the display will show 'IN' and your inputting numbers. It means that the new user code is confirmed.

Programming the master code

- A. Press the red button then press the button 'START'. The display will show 'oLd Code'.
- B. Now input the original master code (factory preset code: 8,8,8,8) and press the button 'START'. The display will show 'SET'. Now press from 3 to 8 numbers that you wish to use as a new master code, and confirm by pressing the button 'START'. The display will show 'rE-INPUT'.
- C. Now enter your inputting numbers again and confirm by pressing the button 'START'. After hearing a musical sound, the display will show 'IN' and your inputting numbers. It means that the new master code is confirmed.

If you or an intruder uses the incorrect group of numbers, you will hear a beep with the display showing 'Error' and it will not open. If the incorrect combination code is used 4 times consecutively, the display will show 'Error', the buzzer will sound for approximately 3 minutes. The correct code cannot be entered until after this 3 minutes delay. The override key can however be used to open the door during this three minutes. If the key is used to open the door, the buzzer can be cleared by pressing the red button(b) (see diagram 2).

If you do not want the display to show your codes or numbers when you open the safe, just press the button 'START' twice at the first time of pressing and other steps are the same.

5. BATTERY REPLACEMENT WARNING

To test the batteries, just press the button 'START'. If the batteries are low, the display will show 'Lo-BAE', and you should replace the batteries. Use of alkaline batteries is recommend.

6. REPLACING THE BATTERIES

The safe requires 4× size 'AA' (1.5V) batteries. Open the safe, remove the battery cover on the back of the door, and replace the old batteries. The use of alkaline batteries is recommended.

7. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, the safe can be opened by override key manually.

- A. To use the key, remove the small plastic cover on the front panel.
- B. Turn the key anti-clockwise, then turn the knob clockwise, and open the door.

8. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are holes (diameter 8mm) both in the bottom and on the back, which allow it to be fixed by the fixing bolts supplied.

