

## LP Lock instructions

**Thank You for purchasing a quality LP –EL-20 Digital lock**

**To initially open the LP lock push 123456**

**Before you use the safe you must change the combination to your own personally selected combination.**

### New Code Change Procedure

Press & hold the “0” key until you hear a double beep, then enter the existing code once e.g. 123456 then enter your new (6) digit code twice. Double beep indicates acceptance.

Test the lock a couple of times before you close the safe door.

Enter your new code, \_ \_ \_ \_ \_ \_ The safe should now be unlocked

### Changing the battery

The battery should be changed once a year or when the lock signals you with multiple beep tones \* don't ignore this low battery warning when you hear multiple beep tones change the battery.

The battery access port is located at the bottom of the keypad. The battery cover will slide sideways to allow access to the 9V battery. Carefully pull the battery downward and unplug the wire from the battery. (Be careful not to put pressure on the wire)

Install the new battery

**\*ONLY USE QUALITY DURACELL COPPERTOP ALKALINE BATTERIES**

Please do not hesitate to call us with any questions  
1-888-887-8212

