

OPERATING INSTRUCTION

CAUTION: Do not keep the keys in the safe itself!

1. OPENING THE SAFE FOR THE FIRST TIME

To open the safe for the first time, remove the small central rubber cover "Z" (see diagram 2) between knob and keypad, insert the key into the lock and turn it counter-clockwise, at the same time, turn the doorknob clockwise and open the door.

2. INSTALLING THE BATTERIES

The safe requires 4 × size "AA"(1.5V) batteries.

The batteries compartment "Y" (see diagram 1) is located on the back of the door. Remove the battery cover and install the batteries into the compartment. Ensure the batteries are fitted with the correct corresponding polarity.

Once the batteries are installed, close the battery compartment.

3. PROGRAMMING THE CODE

- A. Remove the battery cover and press the red button "X" inside the battery compartment (see diagram 1), release it and you will hear two beeps.
- B. Now press from 3 to 8 numbers that you wish to use as a combination, and confirm by pressing the letter "B" within 15 seconds. Or you have to do from the beginning.
- C. Write down your new combination immediately and check whether your new combination has been programmed or not on conditions of the safe door open.

4. USING YOUR SAFE

To open the safe, enter your personal code and confirm by pressing the letter "A". You will hear a beep and the green light will be on, then open the door using the knob within 5 seconds.

If you or an intruder uses the incorrect group of numbers, it will not open. If the incorrect combination is used 3 times consecutively, you must wait for 20 seconds before reattempting. If again the incorrect combination is selected 3 times, you must wait approximately 5 minutes before reattempting access.

5. BATTERY REPLACEMENT WARNING

If the batteries are low, the red light (in the left) will warn you immediately. To test the batteries, just input your personal numbers to open the door. If the batteries are low, the red light will be on. If nothing happens, it means that the batteries are in order

6. REPLACING THE BATTERIES

The safe requires 4×size "AA" (1.5V) batteries. Open the safe, remove the

battery cover plate "Y" (see diagram 1) on the back of the door and replace the 4 PCS old batteries. You must reprogram the code, using the above third step. Use of alkaline batteries is recommended.

7. OVERRIDE INSTRUCTION TO OPEN THE SAFE

For your convenience, we have engineered a manual override system for your safe. If you forget or misplace your combination, remove the small central rubber cover "Z" (see diagram 2) between knob and keypad, insert the key into the keyhole and turn it in a counter-clockwise direction, then turn the knob in a clockwise direction towards the right. This will manually open your safe at any time.

8. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured inside the wall. For your convenience, there are holes (diameter 8mm) on sides of the safe, can be fixed by the expansion bolts supplied.

