

## **SecuRAM Lock Instructions**

*Thank You for purchasing a quality SecuRAM Digital lock*

*Before you use the safe you must always have the safe door open while changing the combination to your own personal selected code.*

*Enter valid six (6) digit combination (factory set to 1-2-3-4-5-6).*

### **New Code Change Procedure**

*Enter "0" six times , then enter the existing code once e.g. 123456 then enter your new (6) digit code twice. Single beep indicates acceptance of new code entry. Test the lock a couple of times before closing door.*

### **Changing the battery**

*One 9v alkaline battery is installed in the compartment in the bottom of the keypad. To replace the battery, pull out the battery compartment first, Follow these steps :*

- 1. Release the latch of the battery compartment until it comes to the end.*
- 2. Pull out the battery compartment from the bottom of the keypad. Take out the battery and replace with a new one. Make sure the positive and negative poles are seated in the correct position.*
- 3. Put the battery compartment back into the keypad. Push it up until it is in line with or level with the cover. Pull up the latch of the battery compartment until it is tight and secure.*

**\*ONLY USE QUALITY DURACELL COPPERTOP ALKALINE BATTERIES**

*Please do not hesitate to call us with any questions  
1-888-887-8212*

[www.brawnsecurity.com](http://www.brawnsecurity.com)

